MIDMARK®

9A161001 ARTICULATING HEADLOCK INSTRUCTIONS

1. Remove the headlock assembly from the carton and inspect it for any shipping damages. Contact the shipping carrier and factory with any claims immediately.

2. Installation: A. Fasten headrest upholstery (not included) to headlock, as shown below, using the four bolts in the cotton bag.
   B. Insert the square end of the headlock into the socket, located on the rear of the back section of the table. Now tighten by turning the lever, nearest the headrest socket, clockwise (See figure below.).

3. Operation: A. To adjust the headrest to the patient's height turn the lever, nearest to the headrest socket, counterclockwise one turn allowing the assembly to slide in and out, but not completely out. Position the headrest as desired and tighten lever, turning it clockwise (See figure below).
   B. To change the angle of the headrest, grasp the handle (shown below) with one hand and the knob (shown below) with the other hand. Slowly unlock the headlock by turning the handle counterclockwise until you can move the headrest. Supporting the patient's head, position as desired. Lock the headlock by turning the handle clockwise.

4. Removal: Turn lever, located nearest the headrest socket counterclockwise three to four turns and pull assembly out.

5. If you have questions concerning the operation of your headlock or in the event of equipment failure, please contact your dealer or call Midmark service department at l-800-MIDMARK.

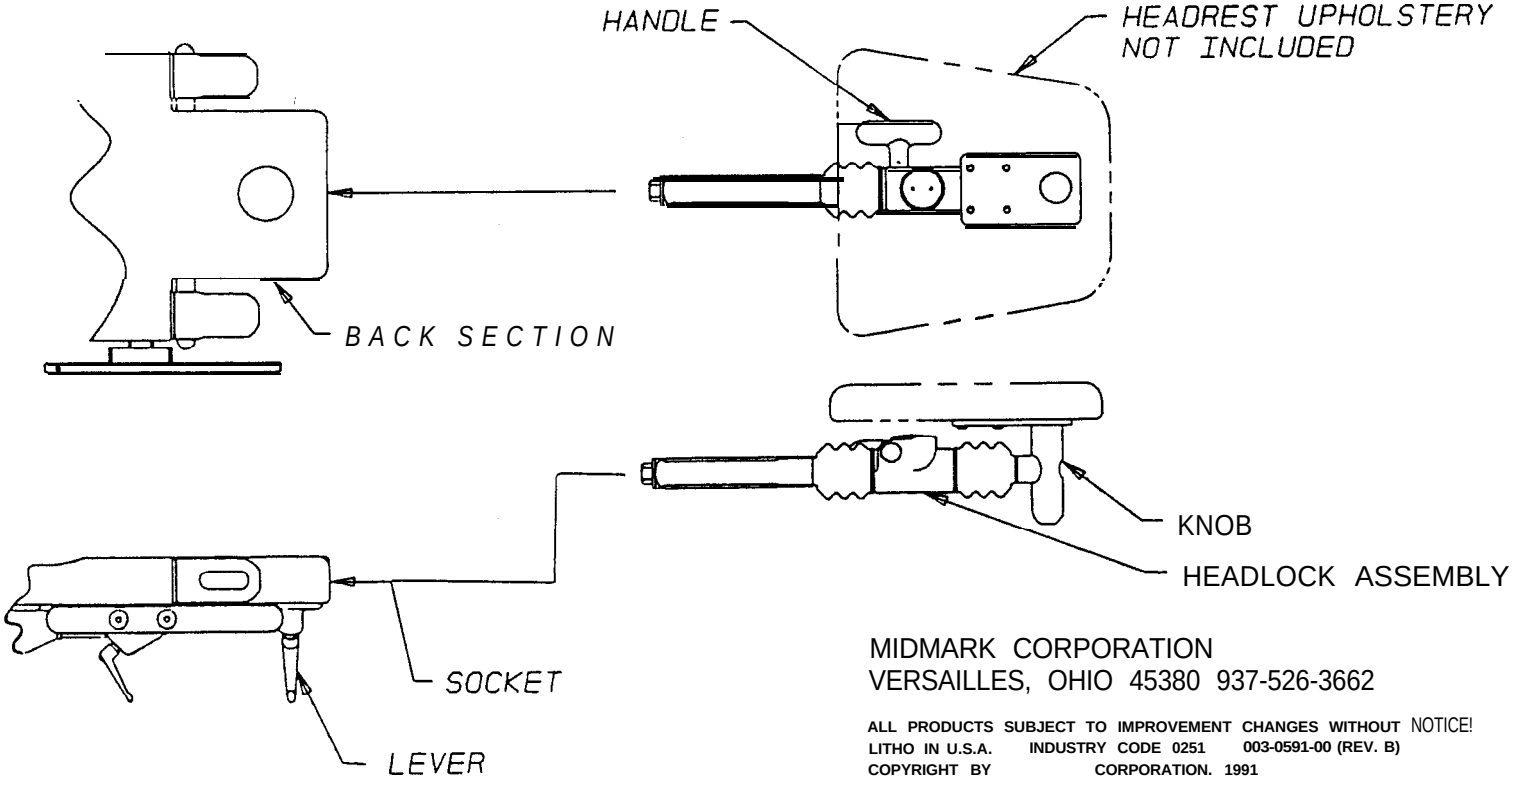

MIDMARK CORPORATION
VERSAILLES, OHIO 45380 937-526-3662

ALL PRODUCTS SUBJECT TO IMPROVEMENT CHANGES WITHOUT NOTICE!
LITHO IN U.S.A. INDUSTRY CODE 0251 003-0591-00 (REV. B)
COPYRIGHT BY CORPORATION. 1991